

FAQ

When I open <http://faba.local:8000/>, the webpage doesn't show up!

- Check if the power supply and the network cable are connected to the FABA Control Box.
- Ensure your phone is connected to the same network as the FABA Control box.

How many panels can the FABA Control box handle?

- The software allows for a maximum of 80 panels.

Can I connect multiple phones and computers to one bridge?

- Yes, you can connect multiple devices simultaneously. All devices can control the panels at the same time. New settings and colors get synchronized across devices.

SUPPORT

If you have any questions or you may need service contact the reseller you purchased the product from. Otherwise feel free to email us at:

fabaambiance@gmail.com

WARRANTY

The Product comes with a limited 2-year warranty. The warranty covers any defects in material or workmanship under normal use during the warranty period. To obtain warranty service, you first must contact us. The product will either be repaired, or you will receive an equivalent refurbished replacement.

SHOW SOME LOVE

Share your masterpiece or leave a comment!



Welcome to FABA Ambiance

Quick start guide

Congratulations on becoming an official owner of FABA Ambiance, a product that will let you experience stunning lighting moods by snapping together panels with ease. But now, let us begin!

What you need to get started



1x FABA Control Box



10x FABA Panels



1x Connection Cable



1x Power Adapter



1x Tape




30x Screws & Dowels

Starting is easy...

On the next two pages, you find a quick guide which helps you in the set-up process.

Installing FABA Ambiance

1. Mount your FABA Panels to your wall with the included screws or the 3M tape. Connect each FABA Panel to another via the pin headers. Please note, that every panel has one input (male header) and two outputs (female header).

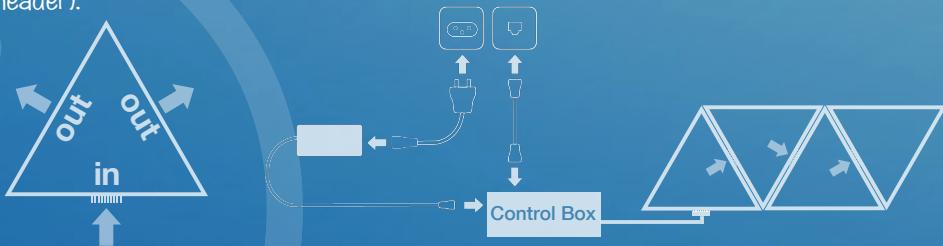

2. Connect the first panel to the FABA Control Box with the included connection cable.
3. Connect FABA Control Box to your network with an ethernet cable.
4. Plug in the FABA Control Box to your outlet by using the included power adapter.

Connecting your Device

1. Open the browser (for example Chrome or Safari) on your Smartphone*.
2. Type <http://fabalocal:8000> into the address bar.
3. Add this page to your home screen:
 - iOS: Press (share) and then click on „add to home screen“.
 - Android: Press (options) and then click on „add to home screen“.


Done! The web app is now installed on your device. From now on, you can access the control by clicking on the created icon on your home screen.

*Note: You can also access the page from your computer by following the first two steps (see above).

Controlling FABA Ambiance

1. Basics:
 - On/Off switch:By pressing the On/Off switch you can turn your FABA Ambiance on and off.
2. Side-Bar:
 - By pressing the menu button you can access different modes and the debug options (only for advanced users) and you can also change the language (EN/GE).
2. Set colors:

To change a color, press on a triangle. A color wheel appears and you can choose your color by sliding or clicking.

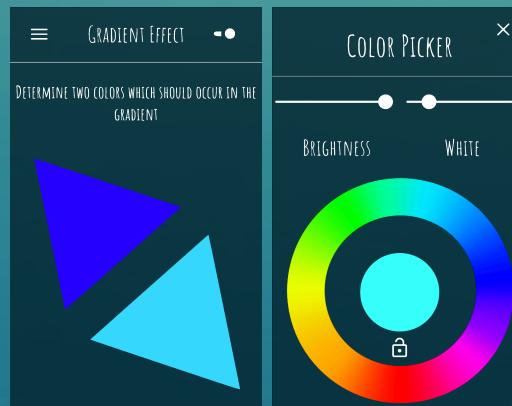

Note that a click locks the color until a next click is detected (shown by the little lock symbol).

There are two additional sliders for brightness and the amount of white light.

3. Modes:
 - ONE COLOR: In this mode, every panel has the same color.
 - INDIVIDUAL COLORS: Here, you can choose an individual color for each panel. For selecting a panel, use the buttons.
 - GRADIENT EFFECT: This mode lets you choose two colors (displayed as two triangular shapes). The panels then automatically create a gradient from the first to the last attached panel.
 - FADE EFFECT: The panels fade smoothly from the first color to the second. The speed can be adjusted by using the slider.
 - RETRO EFFECT: The panels show random colors in retro-style. You can choose to change just one panel color a time or all panels at once.